

BASS CONTROL KNOBS

Preamp is powered by a 9-volt alkaline battery (battery life approximately 6-12 months), which is switched on via the input jack. To preserve battery life, unplug cables when not in use.

Flat response is achieved when bass and treble boost controls are set to 0 (fully counterclockwise) and vintage tone is set to 10 (fully clockwise).

You can start with the treble and bass controls fully counterclockwise. **Setting the bass and treble controls to 10 is not recommended.** Depending on wiring and lighting conditions, boosting treble above 75% can attract noise and hiss.

We consider 0-75% the best working range of the preamp. On all models (unless otherwise specified), the pickup pan control selects the bridge pickup when turned clockwise and the neck pickup when turned counterclockwise. Instructions are included for reversing the direction of the pan pot.

SPECIFICATIONS

Frequency Response

5 Hz bis 20,9 kHz (+/- 1,5 db)

Power Source

One 9V battery

Battery Life

870 hours

Bass Control

+18 db @ 40 Hz

Treble Control

+18 db @ 4 kHz

Total Harmonic Distortion

 
 
 
 
0,8 % @ 1 kHz

Input Impedance

1 MΩ

Output Impedance

1 kΩ

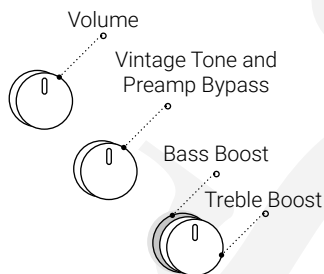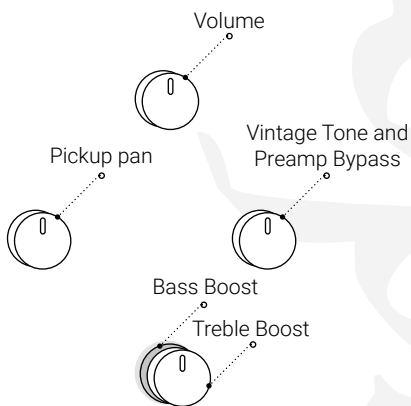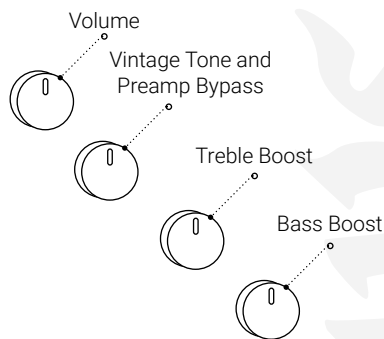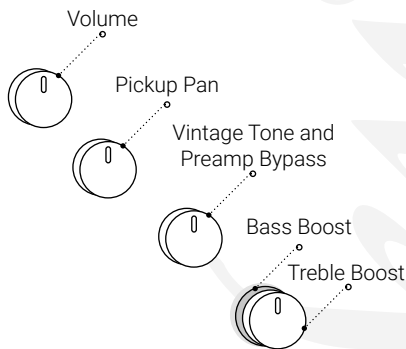

FRESH STYLES

FOR YOUR INSTRUMENT



PREAMP CHANGE

SADOWSKY
ONBOARD BASS
PREAMP

WITH VINTAGE TONE
CONTROL & MID BOOST



STYLE UPGRADES



Sadowsky[®]
MasterBuilt

Sadowsky[®]
MetroLine