

MOGER

CT-01

Clip-on Tuner

Owner's Manual

Precautions

PLEASE READ CAREFULLY BEFORE PROCEEDING

Power Supply

Please be sure to only use a 3V lithium button cell (Cr2032).

Cleaning

Clean with a soft, dry cloth. If necessary, slightly moisten the cloth. Do not use abrasive cleansers, cleaning alcohol, paint thinners, wax, solvents, cleaning fluids, or chemical-impregnated wiping cloths.

Interference with other electrical devices

Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions.

Location

Avoid leaving the CT01 Tuner in the following locations:

- Direct sunlight
- Magnetic fields
- Excessively dusty or dirty areas

To avoid deformation, discoloration, or other serious damage, do not expose this unit to the following conditions:

- Heat sources
- Extreme temperature or humidity
- High humidity or moisture

Do not leave this product attached to your instrument when not in use as it could damage the finish on some instruments, especially if while exposed to bright light or heat.

Features


- Suitable for guitar and bass guitar
- Fast, accurate tuning from 435 to 445Hz
- 180° rotatable hinge
- Power saving mode and automatic shutdown
- Bright, colorful display

Instructions

- Attach the tuner to the headstock or body of your instrument. The clamp can be rotated up to 180° to find your preferred viewing angle.
- Power on the tuner by pressing the power button.
- Press and hold the power button in the ON state to adjust the tuning frequency. When the screen displays "0", the tuner is set to 440Hz. You can adjust the frequency from "-5" to "+5" or 435Hz to 445Hz, by pressing the power button again. This mode will automatically exit after three seconds.

- Adjust the string to the target note as indicated on the pitch display. The note is in tune when both indicator LEDs are simultaneously lit up.
- The tuner will enter power saving mode after 10 seconds. After 2 minutes, CT01 will turn off automatically.
- The user can power it off manually by pressing the power switch.

Layout

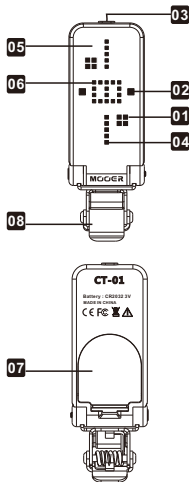

- 1. Semitone Display:**
Indicates if the note is a flat or sharp.
- 2. Accurate Pitch Display:**
Displays the current string's target note. Both the upper and lower indicator LED light up simultaneously when correct pitch is achieved.
- 3. Power Switch:**
Press switch to power on/off. Press and hold to adjust the tuning frequency. It will automatically exit after 3 seconds.
- 4. Pitch Offset Display:**
Indicates if the target note is sharp (above) or flat (below).
- 5. Screen:**
The CT01 tuner is gravity sensitive and the display will always adjust to face the proper direction, allowing you to mount it as you wish.
- 6. Pitch Display:**
Indicates the target note.
- 7. Battery Compartment:**
Use 3V lithium cell battery only.
- 8. Retaining Clamp:**
Stable and durable metal fixture with 180° rotatable hinge.

Specification

Power requirements: 3V lithium cell (Cr2032)**Dimensions:** 57 mm (L) X27mm (W) X8mm (H)**Weight:** 25g**Accessories:** Owner's Manual

*Notes : Any specification's update will not be amended in this manual.