

MOOER

RedKid

Talk Wah Pedal

Owner's Manual

Precautions

Please Read Carefully Before Proceeding

Power Supply

Please connect the designated AC adapter to an AC outlet of the correct voltage. Please be sure to use only an AC adapter which supplies 9V DC($\pm 10\%$), $\oplus \ominus$, center negative. Unplug the AC power adapter when not in use or during electrical storms.

Connections

Always turn off the power of this and all other equipment before connecting or disconnecting, this will help prevent malfunction and / or damage to other devices. Also make sure to disconnect all connection cables and the power cord before moving this unit.

Cleaning

Clean only with a soft, dry cloth. If necessary, slightly moisten the cloth. Do not use abrasive cleanser, cleaning alcohol, paint thinners, wax, solvents, cleaning fluids, or chemical-impregnated wiping cloths.

Interference with other electrical devices

Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions.

Location

To avoid deformation, discoloration, or other serious damage, do not expose this unit to the following conditions:

- Direct sunlight
- Excessive dusty or dirty location
- Magnetic fields
- Extreme temperature or humidity
- Heat sources
- High humidity or moisture
- Strong vibrations or shocks


FCC certification

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

Overview


Red Kid is a vocal simulation pedal which lies somewhere between a wah wah and a talk box. It clearly replicates 2 different vocal sounds like you may expect to hear from a talkbox or vocoder device. Operated like a traditional wah pedal it's super expressive and there's no need for messing about with microphones or rubber hoses. Just pop it into your effects chain like any other pedal. Red Kid comes equipped with MOOER's unique pressure sensing footswitch for instant operation. Making your guitar talk has never been so simple!!!!

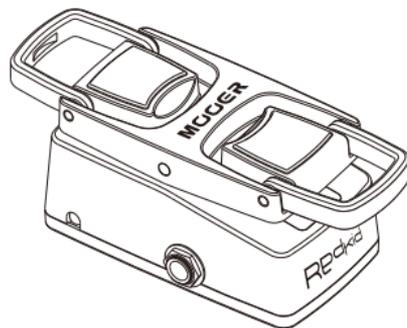

Main Features

- Talk wah replicates the tonal qualities of the human voice and can bring new inspiration to your music
- Equipped with MOOER's unique pressure sensing footswitch
- Simulates 2 different vocal sounds
- True Bypass switching
- Rugged metal housing

Pedal layout

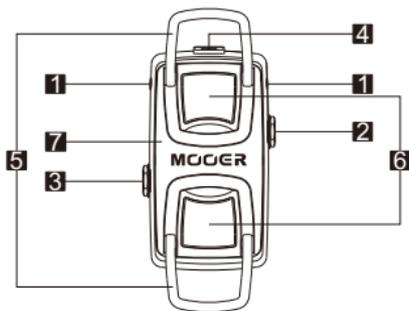

- 1. LED :**
Indicates the on/off status of the effect pedal
- 2. Input jack :**
1/4" audio jack for connecting to the input device or instrument.
- 3. Output jack :**
1/4" audio jack, effect output for connection to amp or other devices
- 4. DC in power jack:**
Input for power supply, use a 9V DC regulated power supply ⊕ ⊖, center pin negative.
- 5. Pedal extension rings:**
Can be extended to increase pedestal surface area and increase comfort
- 6. Pressure sensing pads :**
Activates the effect by detecting the presence of your foot. Front sensing pad is used to change Effect mode. Rear sensing pad is used to change switching mode.
- 7. Expression Pedal:**
Controls vocal sweep of the effect

Modes and Switching

SWITCHING MODES

RED KID has 3 different types of switching.


1. Touch the pressure sensing pads with your foot to turn on the effect. Release your foot from the pedal to turn off the effect
2. Double tap the pressure sensing pads to turn on the effect. The effect will remain on until you double tap the pressure sensing pads for a second time
3. In this switching mode you can use both techniques mentioned above for switching the effect on and off

To change switching mode:

- Press and hold the heel pressure sensing pad while the pedal is connected to power
- Disconnect the power whilst continuing to hold the sensing pad
- Reconnect power

The LED's will flash RED to confirm the mode has changed.

- Flashing once means mode
1, flashing twice means mode
2, flashing three times means mode
3. Release the pressure sensing pad to resume operation.

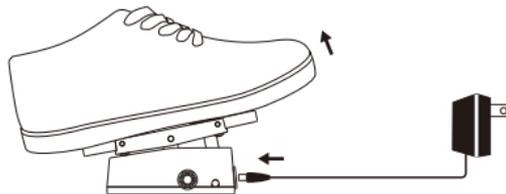


TALK MODES

The RED KID has two different TALK modes, each with a different vocal sound. To change TALK mode:

- Press and hold the toe pressure sensing pad while the pedal is connected to power
- Disconnect the power whilst continuing to hold the
- Reconnect power

The LED's will flash BLUE to confirm the mode has changed. Flashing once means mode

- 1, flashing twice means mode
2. Release the pressure sensing pad to resume operation

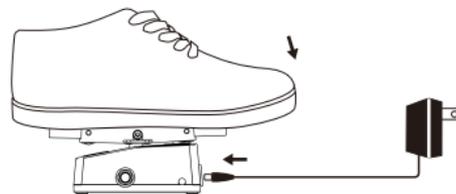

Specifications

- Input :** 1/4" mono audio jack. (Impedance: 1M Ohms)
Output : 1/4" mono audio jack (Impedance: 100 Ohms)
Power requirements: AC adapter 9V DC , center negative. Highly recommend to use Mooer Micro Power.
Current Draw : 130mA
Dimensions : 128mm(D) x 55mm(W) x 48mm(H)
Weight : 460g
Accessories : Owner's Manual

**Notes: Any specification's update will not be amended in this manual.*