



**ANGEL
WING**

T-M-11
chorus
Owner's Manual

All of the TONE CITY products were Poured into our enthusiasm and focus. We never stop on the path of development.

CONTROLS

LEVEL - Controls the intensity of chorus.

DEPTH - Controls the depth of chorus.

RATE - Controls the speed of chorus. Colckwise is speed up, left is slow down.

JACKS

INPUT - 1/4" jack on the input side.

OUPUT - 1/4" jack on the output side.

SWITCH

FOOT SWITCH - turn on/off the pedal.

POWER

This pedal should be operate at 9V DC Negative Center .
If the use of other specifications of the power supply
cause damage . Your warranty will be voided .