



# DOUBLE BARREL V4

**JHS** PEDALS

*Everything possible, low to medium gain. The ultimate overdrive covers every style with ease in a compact design. It has our Morning Glory V4 with Red Remote capability and our Moonshine V2.*

## Controls

### **LEFT SIDE - MORNING GLORY V4**

**VOLUME** - Controls the output volume.

**DRIVE** - Controls the amount of drive or gain just like a tube amp being cranked at high volumes. You will notice that as you turn up the drive it also adds brightness.

**TONE** - Controls the amount of brightness. Right is brighter, left is darker.

**GAIN TOGGLE** - Engages higher gain mode when flipped up. The LED will turn red to indicate that you are in high gain mode.

**BRIGHT CUT SWITCH** - Switch on the left side of the pedal that cuts the highest frequencies in case the overall tone is too bright.

### **RIGHT SIDE - MOONSHINE V2**

**VOLUME** - Controls the output volume.

**DRIVE** - Controls the amount of drive or gain just like a tube amp being cranked at high volumes.

**TONE** - Controls the amount of brightness. Right is brighter, left is darker.

**BLEND** - Adds in clean signal as you turn from left to right. All the way left is full overdrive, all the way right is full clean.

**PROOF TOGGLE** - Down is a lower volume yet more saturated tone. Up is louder and more open and crunchy.

## Jacks

**INPUT** - 1/4" jack on the top right side of the pedal.

**OUTPUT** - 1/4" jack on the top left side of the pedal.

**REMOTE GAIN** - 1/4" jack in between the input and output jacks. Plus in a Red Remote to remotely switch the Morning Glory Gain toggle.

**POWER** - Uses 9V DC Negative Center. Do not use more than 9V DC. Your warranty will be voided. 81mA consumption.