

# ROCKTUNER®

by Warwick®

## RockTuner CT 20 User's Manual

### Button functions and operations

#### 1. Power (On/Off Button)

- 1) After installing the battery, the tuner will automatically turn on and the LCD screen will illuminate. The battery symbol will flash when power is low.
- 2) Lightly press and hold the on/off button for 2 seconds to turn on/off the tuner.

#### 2. Set the A4 frequency (A4 - Button)

Press the "A4" button to set the A4 frequency from 430-450Hz.

#### 3. How to operate the tuner

- 1) Clip the tuner onto the instrument where vibration is prominent, adjust the angle to make sure you can see the screen clearly.
- 2) Lightly play your instrument.
- 3) The indicator bars above and below the pitch name indicates the degree of deviation from the displayed note. Bars above the pitch name indicate the pitch is too sharp and by how much, the bars below work in the same way, indicating the pitch is too flat. The backlight displays in red when not yet in tune, and turns to green once in tune.

### Attentions

1. Long time exposure to the following may lead to damage of your CT 20:
  - Direct sunlight
  - Extreme temperature or humidity
  - Excessively dusty environments
  - Magnetic fields
2. Avoid rough handling, do not apply excessive force to the controls.
3. If the exterior becomes dirty, wipe with a clean, dry cloth. Do not use water or chemical liquid cleaners.
4. In the unlikely event that the unit is not performing as it should, please remove the battery for 30 seconds, and reinstall.
5. Be sure to turn the tuner off when not in use. Remove the battery in order to prevent it from leaking when not in use for extended periods.

### Specifications

Tuning Mode: Chromatic


A4 Frequency: 430-450 Hz

Tuning Range: A0 (27.5Hz) - C8 (4186Hz)

Battery: CR2032

Size: 45 x 48 x 34 mm

### Controls and Appearance

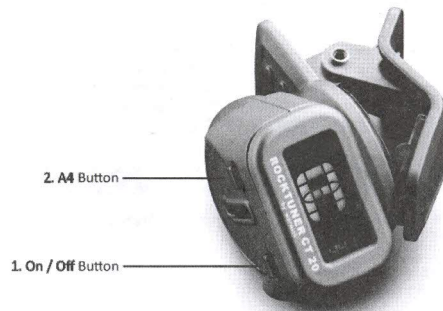

2. A4 Button

1. On / Off Button