

Quick Start Guide

for RockBoard® PedalSafe® with QuickMount® Mounting Plate

Thank you for purchasing a RockBoard® PedalSafe® - Pedal Protector.

The RockBoard® PedalSafe® system is designed to keep your pedals safe, secure and in pristine condition. The flexible pedal shell fits around the housing of most effects pedals on the market. The crystal-clear cover allows you to see your settings while protecting them from accidental adjustments.



Should the screws on your pedal not be long enough, we have included common screw types that are sufficient length for the QuickMount® plates.

IMPORTANT NOTE: For some effect pedals, detaching the battery cover is recommended. Try QuickMount® first without screwing on your pedal to avoid damaging the QuickMount® baseplate.

Installing the PedalSafe Pedal Protectors

Hole outlines:

PedalSafe® systems are designed for most effect pedals on the market with different jack sockets and footswitch configurations. That's why we have marked most common holes which need to be cut out to gain access to sockets and footswitches. Simply place the PedalSafe® on your effect pedal and check which holes need to be cut off. Then, carefully use a cutter or a sharp knife to gain access into your effect pedal.



Housing Sizes & Shim Plates:

PedalSafe® is available in a wide range of different shapes and sizes in order to fit as many pedals types as possible. Some effects pedals have slightly different dimensions; therefore, it is normal for some pedals to have a little space leftover between the pedal and the inside walls of the shell. This is especially common for pedals for PedalSafe® Types B, C, D1, D2 and L, and therefore optional shim plates are being provided. We recommend using a shim plate if the height of your pedal is lower than the height of the PedalSafe® shell.



Installing PedalSafe® cover:

Pull the transparent flexible shell over the pedal and QuickMount® baseplate. Once the bottom plate and shell are mounted, place the transparent cover over the control knobs to secure your settings.



IMPORTANT NOTE: For mounting PedalSafe® Type E onto BOSS compact pedals, you must first detach the battery cover/footswitch plate by removing the screws before being able to pull the PedalSafe® shell over the pedal. Afterwards, reattach the battery cover/footswitch plate again.

Installing the PedalSafe® Protectors with QuickMount® system

Attaching the effects pedal into QuickMount® baseplate

Rubber mat:

To mount your QuickMount® properly into RockBoard® grid, first choose either the 3 mm or 4 mm thick rubber mat provided. Then, peel the protective film off the rubber mat and attach it to back of QuickMount® baseplate. If you prefer to be able to slide the pedal on RockBoard® grid, use 3 mm rubber mat, or if you prefer to mount your pedal tight, use 4 mm mat. Both solutions will secure your effect pedal on RockBoard® grid, however a slight slide may assist you while creating your pedalboard.



Mounting on & Removing from RockBoard® Pedalboards

To mount the QuickMount® loaded pedal onto your RockBoard® pedalboard, simply place it into position on your pedalboard, and press it down. The holding clamps will grab into the Slot Grid and lock your pedal down. When pedal is mounted, you will hear characteristic "click" sound. Make sure that all three latches and each holding clamp are grabbing RockBoard® grid properly.



To detach the QuickMount®, we recommend the RockBoard® QuickRelease tool (sold separately). On the underside of the pedalboard, simply place the QuickRelease® Tool over the clamps and press down. This helpful little tool will push the clamps together on both sides at the same time so you can quickly and easily remove the pedal from your board.



Screws:

The QuickMount® system can be attached to your pedal by using screws from the pedal's bottom plate. Simply turn you pedal over and remove the bottom screws from the pedal housing unit.

Next, take the QuickMount® plate, place it over your pedal's bottom plate and re-insert the screws through the QuickMount® screw holes into those of the pedal. Tighten the screws so the QuickMount® plate is firmly attached.



WARWICK®, ROCKBOARD®, PEDALSAFE®, and QUICKMOUNT® are the trademarks of Warwick GmbH & Co. Music Equipment KG, which may be registered in one or several categories of goods with the United States Patent & Trademark Office. Some of the aforementioned trademarks may be registered in one or several categories of goods in certain other territories. This is not a comprehensive list of all trademarks of Warwick and specifically does not include any common law trademarks or service marks of Warwick. All other names and marks not mentioned herein are the trade names, trademarks or service marks of their respective owners.

USA DISTRIBUTION: Framus & Warwick Music USA, Inc. | info@rockboard.net | 629.202.6790
CHINESE DISTRIBUTION: Warwick Music Equipment Trading (Shanghai) Co. Ltd. | info@warwick.cn | +862134060110
NORTH EUROPEAN DISTRIBUTION: www.rockboard.de | info@rockboard.de | www.w-distribution.de | www.facebook.com/warwickmusicdistribution
Headquarters: Warwick GmbH & Co. Music Equipment KG | 08258 Markneukirchen / Germany | +49 (0) 37422 / 555 - 0
Family Owned • Solar Powered • Sustainably Manufactured in a Green Environment