



REVERB

CONTROLS

VERB - Controls the amount of reverb. Left is less, right is more.

EQ - Controls the overall tone of the reverb. Left is darker, right is brighter.

DECAY - Controls the length of the reverb trail. Left is shorter, right is longer.

PRE-DELAY TOGGLE - Switch up to create a short delay between the time the reverb starts and the original signal.

JACKS

INPUT - 1/4" jack on the right side of the pedal.

OUTPUT - 1/4" jack on the left side of the pedal.

POWER - Requires 9V DC negative center power and consumes 74mA. Do not use more than 9V DC. You will void your warranty.