

## MODE SELECT

### DECAY:

Controls Decay Times of Reverb in All Modes. Turn Right for Longer Reverb

### WARMTH:


Turn Right for Warmer Reverb

### TWEEK:

REV/HALL - Controls Predelay  
SHIMMER - Controls Shimmer Blend

### BLEND:

Controls BLEND of original signal and wet signal in all modes. Center Position, or "50/50" is an equal blend of WET and DRY, this is the standard operating position. Turn left for less reverb, turn right for more. Full right will result in WET ONLY.

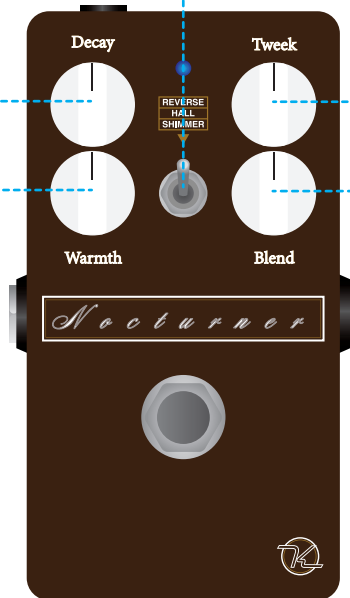

*Nocturner*

### EFFECT TYPE:

Dark Hall Reverb with 3 Modes

### Power Requirement:

9VDC Center Negative, 65mA+  
Power Supply Required

### Input/Output:

Mono Instrument In,  
Mono Instrument Output