BASS CONTROL KNOBS

本製品のプリアンプは、9Vアルカリ電池で動作します（電池寿命：約6〜12か月、電池の種類メーカー、使用環境などによるため、あくまでも目安となります）。アウトプット・ジャックにプラグを差し込むことで電源がオンになります。 電池の消耗を防ぐため、使用しない場合は必ずケーブルを抜いてください。

ベースとトレブルのブースト・コントロールを0（反時計回りに回し切った状態）に、ヴィンテージ・トーンを10（時計回りに回し切った状態）に設定すると、フラットな音色が得られます。

まずはトレブルとベースのコントロールを反時計回りの絞った状態から始めてみてください。ベースおよびトレブルのコントロールを最大（10）まで上げる設定は推奨しておりません。配線状況や使用環境によっては、トレブルを75%以上に設定するとノイズが発生いたします。

本プリアンプの推奨動作範囲は0〜75%です。すべてのモデルにおいて（特別仕様でない限り）、ピックアップ・バランス・コントロールは以下のように動作します。

・時計回り：ブリッジ・ピックアップ
・反時計回り：ネック・ピックアップ

＊バランス・ポットの配線を変えることで回転方向 を反転させることが可能です。

SPECIFICATIONS

Frequency Response
5 Hz bis 20,9 kHz (+/- 1,5 db)

Power Source
One 9V battery

Bass Control
+18 db @ 40 Hz

Treble Control
+18 db @ 4 kHz

Total Harmonic Distortion
.18% @ 1 kHz

Input Impedance
1 MΩ

Output Impedance
1 kΩ

Sadowsky® MasterBuilt Sadowsky® MetroLine

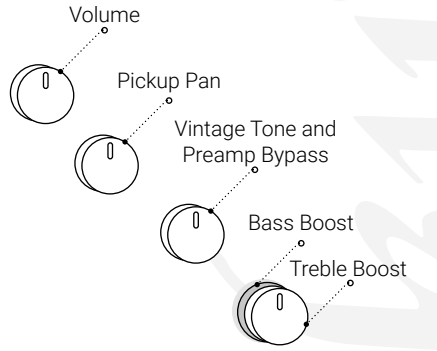

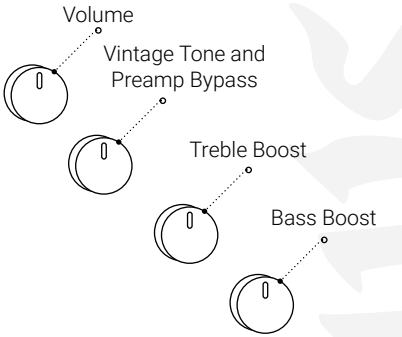

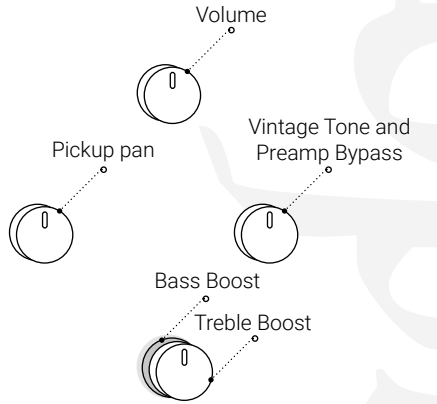

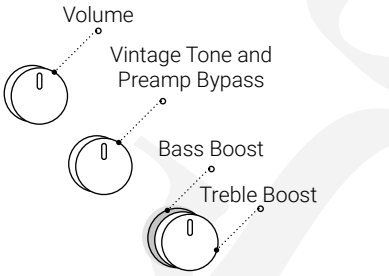

FRESH STYLES
FOR YOUR INSTRUMENT

PREAMP
CHANGE

SADOWSKY
ONBOARD BASS PREAMP

WITH VINTAGE TONE CONTROL & MID BOOST

STYLE
UPGRADES

Sadowsky® MasterBuilt Sadowsky® MetroLine

sadowskybasses | sadowskybasses | SadowskyInstrumentsOfficial